




Cejipac Sdn. Bhd.

Container Loading & Securing Plan For Loose Tins

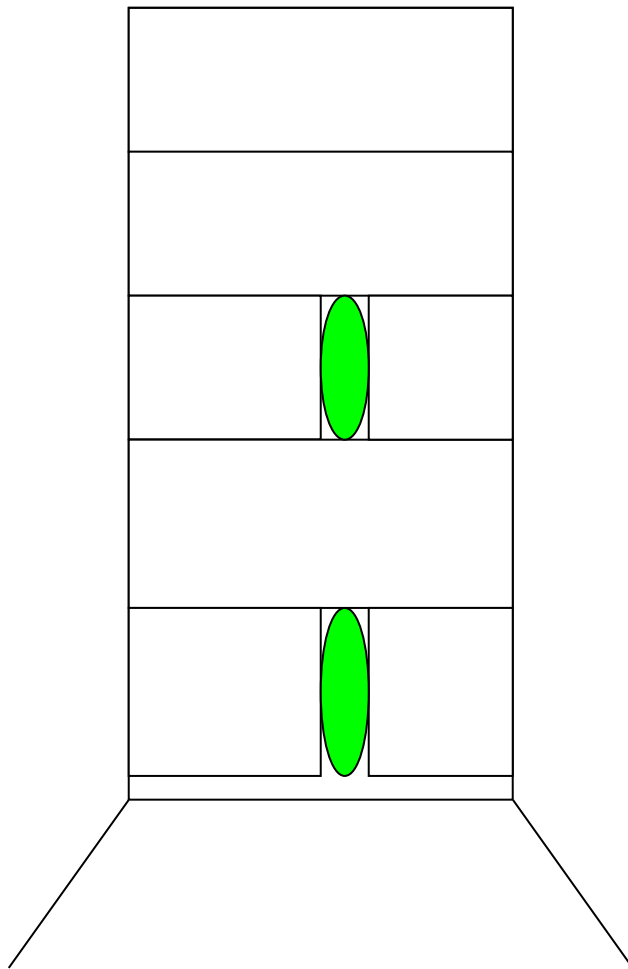

Top View

Notes:

1. Ensure that all the tins are touching each other and the container walls during loading .Start from the closed end of the container

2. At the middle of the container place allow space in the middle to place and inflate one 90 x 180cm dunnage bag placed vertically .
- 3 Sandwich the dunnage bag between two pieces of used cardboard to prevent puncture by sharp protrusion from the pallet or strapping seals .
- 4 Place the dunnage bag about 10 cm above the floor or adjust till the the uppermost layer of tins are all touching the dunnage bags (the bag will be about 10 cm above the the uppermost layer of tins).
- 5 Inflate the dunnage bag till the tins beside the dunnage bags are very tightly wedged against each other and against the container walls(you cannot move any of them with your hands) or you just hear the container wall about to buckle .
- 6 Continue to load and stack the tins till you come to the container door. Place the bag per Para 4 and at the same time protrude outwards by about 5 cm from last row of tins.
- 7 Inflate the bag till all the tins wedged by the dunnage bag and container walls are tightly secured. Plug the valve and close the container doors.